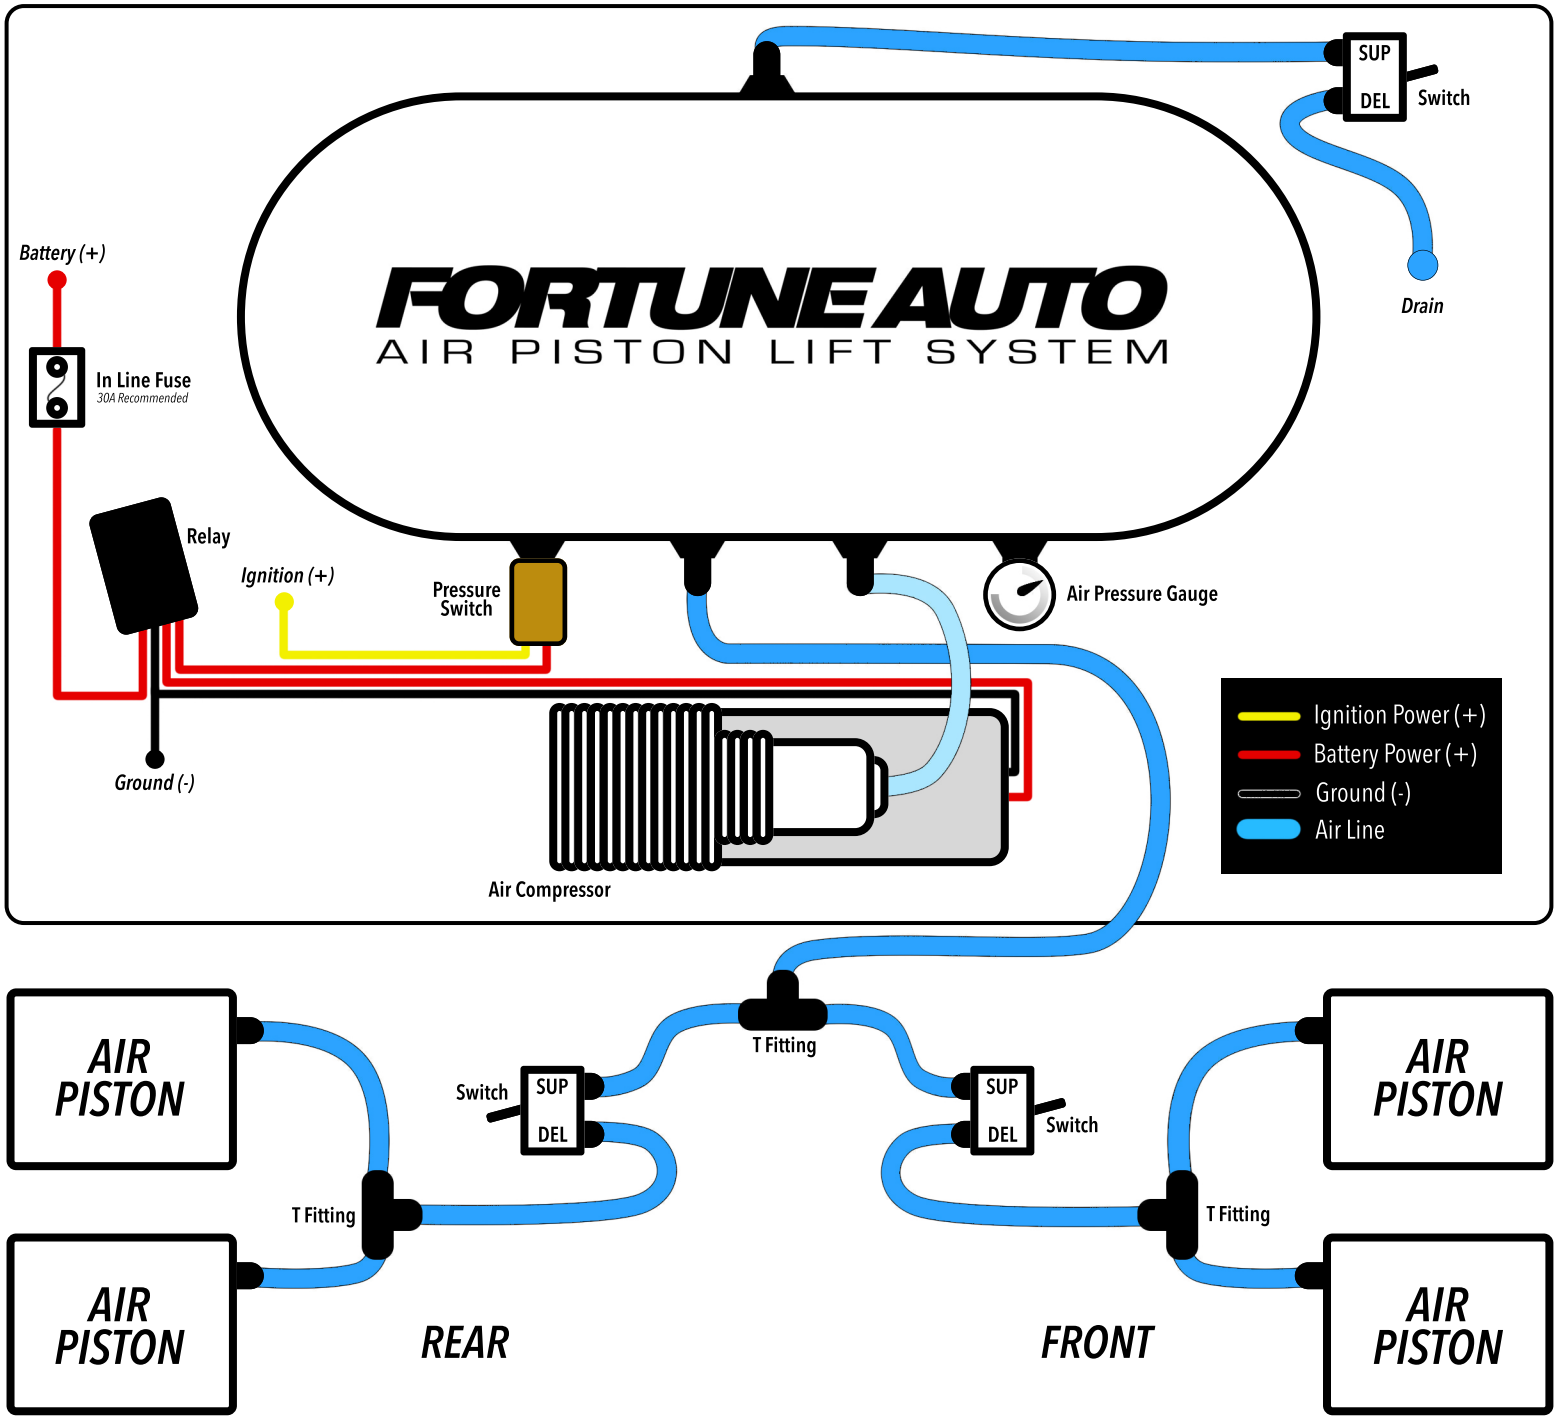
FORTUNE AUTO
AIR PISTON LIFT SYSTEM
SUP
DEL
Switch
Drain
Battery (+)
In Line Fuse
30A Recommended
Relay
Ignition (+)
Pressure Switch
Air Pressure Gauge
Ground (-)
Air Compressor
Ignition Power (+)
Battery Power (+)
Ground (-)
Air Line
T Fitting
Switch
SUP
DEL
Switch
SUP
DEL
T Fitting
T Fitting
AIR PISTON
AIR PISTON
AIR PISTON
AIR PISTON
REAR
FRONT

REFER TO DIAGRAM ON OTHER SIDE FOR ELECTRICAL AND AIR LINE PATHWAYS.

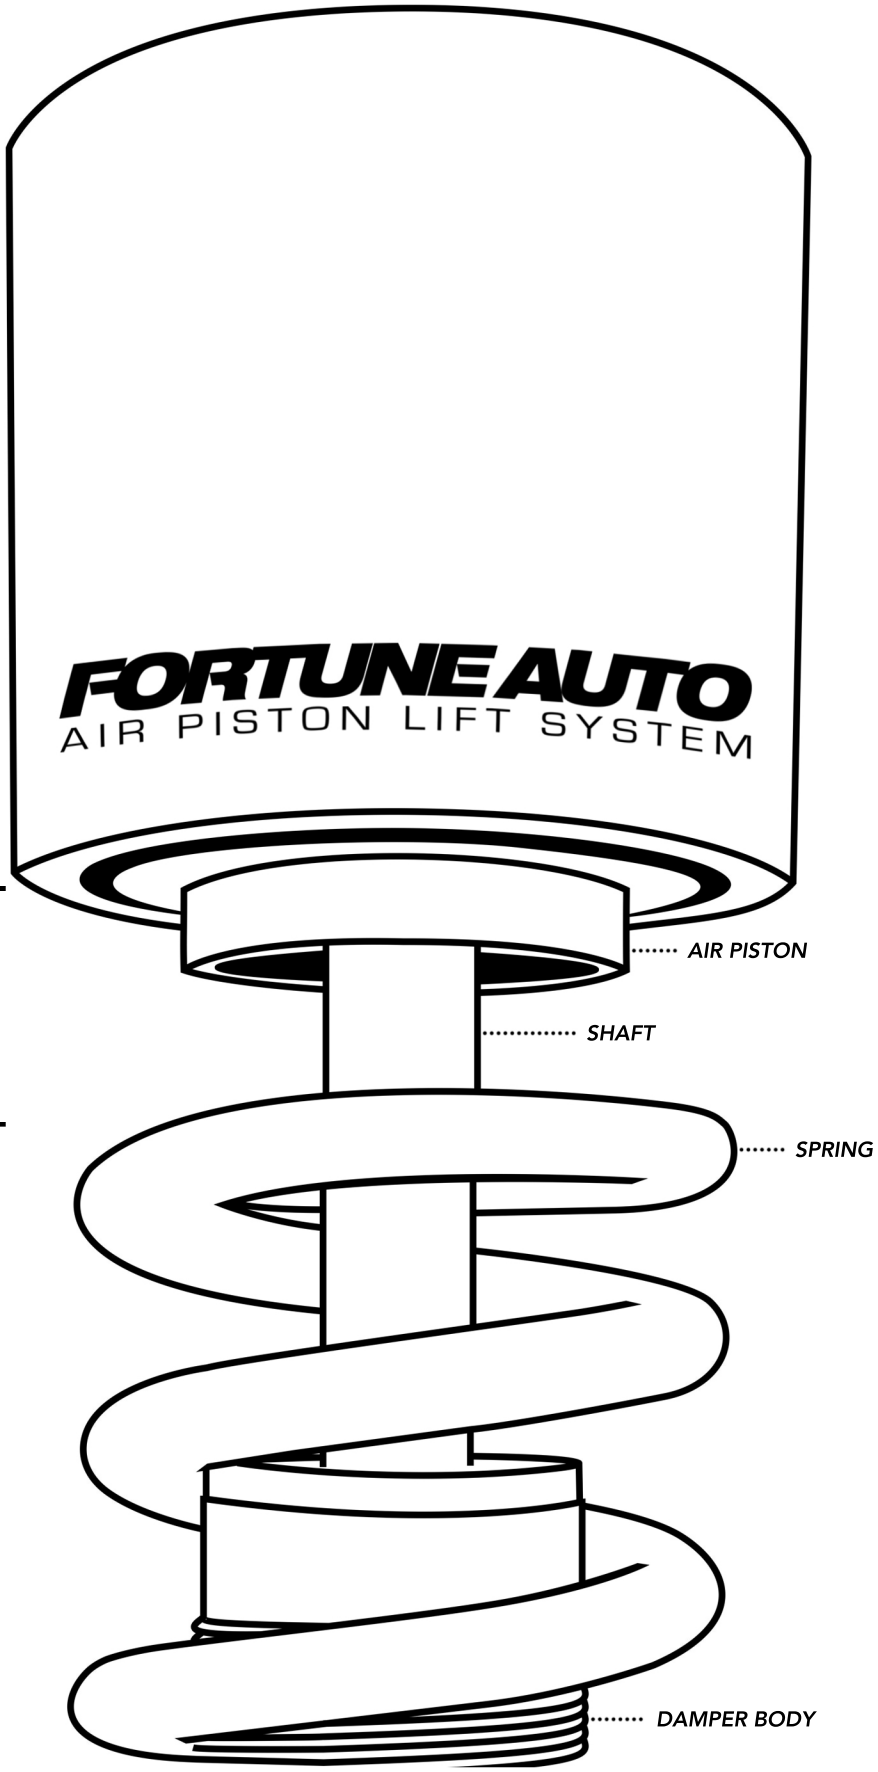

- 1/2" to 1" of spring droop required between air piston and spring for optimal performance.

DO NOT DRIVE WITH WITH AIR PISTONS FULLY EXTENDED AT SPEEDS ABOVE 5MPH. *DESIGNED TO CLEAR OBSTACLES SUCH AS SPEED BUMPS, TRAILER RAMPS, DRIVEWAY ENTRANCES, ETC FOR LOWERED VEHICLES. RISK OF CATASTROPHIC FAILURE IF DRIVING WHILE AIRED UP AT ROADWAY SPEEDS.*